



LifeFilta 'Bottle'

LifeFilta Bottle model is compact, lightweight, affordable & simple in use and an essential travel companion or for daily use... The capacity depends on the water quality to be filtered.

The LifeFilta Bottle model is made from FDA approved High Grade material & equipped with a Self-Maintainable LifeFilta Filter unit by Nano Filtration @ 0.002 μ m (2 nano). The LifeFilta Bottle has a content of 1L & will filter up to 2.000L. The LF Bottle is Re-Usable: After special maintenance, the LifeFilta is again ready for another 2.000L ...

How to Use the LifeFilta Bottle


1. Fill up the LifeFilta Bottle with water & close the bottle/filter unit firmly.
2. Press & sip the remaining air out of the filter and start drinking.
3. After use, drain all remaining water out of the LifeFilta Bottle by evacuating & throwing out the water & dirt. Close the Bottle again when the system is dry.

The LifeFilta will easily filter up to 2.000L from:

- Municipal water, most lakes, streams, ponds, well, river, tube well water sources
- Sediment flood water
- Turbid water
- Most toxic chemicals

The LifeFilta must NOT be used to:

- Filter HOT water, exceeding 45°C
- Filter FROZEN water: damage of the special LifeFilta will occur!
- Remove salt contained in water

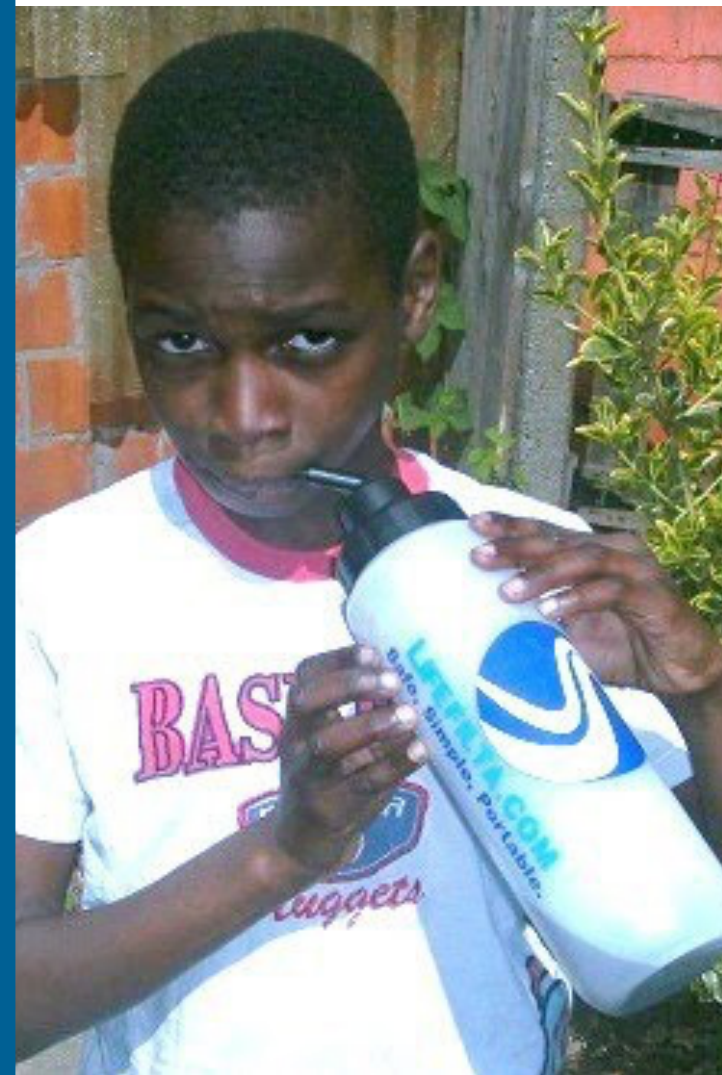



OPERATING AND MAINTENANCE INSTRUCTIONS

The LifeFilta bottle is fitted with a special membrane which uses Nanofiltration technology and is suitable for personal use to protect against water borne bacteria and virus found in untreated clear water in lakes, rivers, brooks or tap water of many countries. When used in accordance with this operating and maintenance instructions leaflet, it filters out 99.9999% of all waterborne bacteria and 99.99% of all waterborne viruses. The LifeFilta Bottle is compact (ca. DxH: 10 x 25 cm), lightweight (135 g), simple to use and an essential travelling companion.

Operating instructions


1. If operating and maintenance instructions contained in the leaflet are observed, the LifeFilta Bottle can be expected to filter up to 2000 Liters.
2. The capacity of the Lifefilta Bottle to filter water depends on the quality of water to be filtered.
3. For optimum results, fill the bottle with water until HWL.. Replace the filter cap and while holding the LifeFilta Bottle upright simply sip through the mouthpiece as one normally sips through a standard straw whilst squeezing the bottle with two hands.
4. Replace the mouthpiece cover once the LifeFilta Bottle is used.
5. Do not use the LifeFilta Bottle in conjunction with a pump to filter water.

Before storing away for the next use, the Straw or Bottle filter unit must be drained/cleaned AFTER EVERY USE and the unit must be completely dried. Store LifeFilta in a cool & dry place.

Do not strenuously shake or tap the LifeFilta filter unit on a solid object to evacuate water residu!

Aqua Solutions, s.r.o.
Jiraskova 23
940 01 NOVE ZAMKY
SLOVAKIA

tel.: +421 35 6428 035
fax: +421 35 6428 035
mail: info@aquasolutions.sk
web: www.aqua-solutions.sk

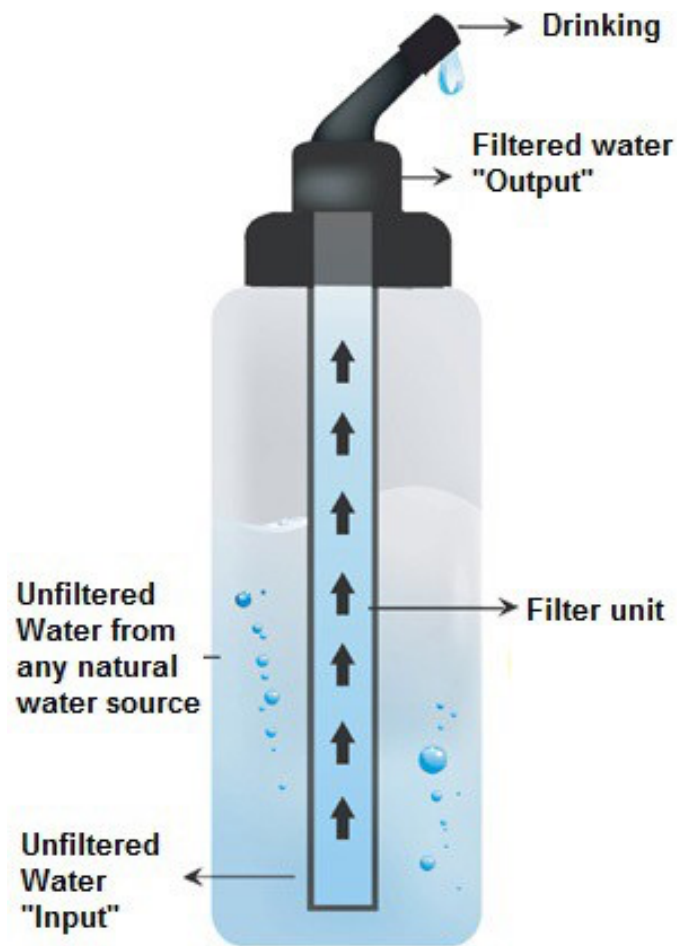

AQUA
solutions
Membrane Technology Inside

